CMU1: With RKP-CMU1

-: Without RKP-CMU1

I: AC Inlet (IEC320-C20)

T: Terminal block

RKP-1U Rack System



 
■ Features :

- Universal AC input / Full range
- · Holds up to 3 power modules
- Active current sharing up to 6000W(3 unit) in one 19"rack, 3 rack max. can be operated in parallel (up to 9 units)
- PMBus serial interface
- IEC320-C20 or terminal block input
- · Front-end & rectifier applications
- Stackable for system expansion
- · Low profile: 1U height, 19" rack mount
- · Hot swappable modules
- · Output voltage trimming function
- 3 years warranty

Description :

RCP-2000 rack power system is an advanced 19" rack-mounted power system containing up to 3 hot-swappable RCP-2000 rectifiers and can deliver up to 6000W in the single rack. Up to 3 racks can be stacked to provide expanded total system capability up to 18,000W that are especially suitable for the application of servers, information technology equipment, networking, telecommunications, and wide range of industrial applications using distributed power architecture Note.8. Equipped with PMBus communication protocol, RCP-2000 rack system can be controlled or monitored by external device such as monitoring unit (RCP-CMU-1) or PC.

SELECTION GUIDE



I: AC Inlet (IEC320-C20) T: Terminal block

SPECIFICATION - Rack System


Rack: RKP-1U I - CMU1

MODEL		RKP-6K1U□-12	RKP-6K1U□-24	RKP-6K1U□-48					
	MODULE	RCP-2000-12	RCP-2000-24	RCP-2000-48					
OUTPUT	RACK	RKP-1UI or RKP-1UT							
	OUTPUT VOLTAGE	12V	24V	48V					
	MAX. OUTPUT CURRENT	300A	240A	126A					
	MAX. OUTPUT POWER Note.6	3600W	5760W	6048W					
	VOLTAGE RANGE Note.5	90 ~ 264VAC 127 ~ 370VDC							
IN DUIT	FREQUENCY RANGE	47 ~ 63Hz							
INPUT	AC CURRENT (Typ.)FOR EACH UNIT	13A/115VAC 7A/230VAC	16A/115VAC 11A/230VAC	16A/115VAC 11A/230VAC					
	LEAKAGE CURRENT	<3.5mA / 230VAC							
	AUXILIARY POWER	5V @ 0.3A, 12V @ 0.8A							
FUNCTION	REMOTE ON/OFF CONTROL	By electrical signal or dry contact ON:short OFF:open							
	REMOTE SENSE	Compensate voltage drop on the load wiring up to 0.5V. "Local Sense" should be connected in order to get the correct output voltage if the "Remote Sense" is not used							
	DC OK SIGNAL	The isolated TTL signal out, refer to function manual							
	AC FAIL SIGNAL	The isolated TTL signal out, refer to function manual							
	OUTPUT VOLTAGE TRIM	Adjustment of output voltage, possible between 90 ~ 110% of rated output							
	OVER TEMP WARNING	Logic " High" for over temperature warning, refer to function manual, isolated signal							
	FAN FAIL SIGNAL	The isolated TTL signal out, refer to function manual							
	WORKING TEMP.	-40 ~ +70°C (Refer to "Derating Curve")							
	WORKING HUMIDITY	20 ~ 90% RH non-condensing							
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH							
	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)							
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes							
	SAFETY STANDARDS	UL60950-1, TUV EN60950-1 approved							
SAFETY &	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:0.7KVDC							
EMC	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C / 70% RH							
(Note 4)	EMC EMISSION	Compliance to EN55022 (CISPR22) Conduction Class B, Radiation Class A; EN61000-3-2,-3							
	EMC IMMUNITY	Compliance to EN61000-4-2,3,4,5,6,8,11, EN61000-6-2 (EN50082-2), heavy industry level, criteria A							
OTHERS	DIMENSION	Rack 483.6*350.8*44(L*W*H)							
OTHERS	PACKING	11.5Kg; 1pcs/11.5Kg/2.67CUFT							
NOTE	1. All parameters NOT specia	lly mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.							

NOTE

- 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor.
- 3. Tolerance: includes set up tolerance, line regulation and load regulation.
- The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives.
- 5. Derating may be needed under low input voltages. Please check the static characteristics for more details.
- Output of all the RCP-2000 modules are connected in parallel in the rack.
- Under parallel operation of more than one rack connecting together, ripple of the output voltage may be higher than the SPEC at light load condition. It will go back to normal ripple level once the output load is more than 10%.
- 8. Because of component tolerance, there is a possibility that some of units connected in parallel will reach an overcurrent limit then overloading the other units when operating at full load condition. If overload conditions happen in parallel usage, it is suggested that derate the total output current by 10%.



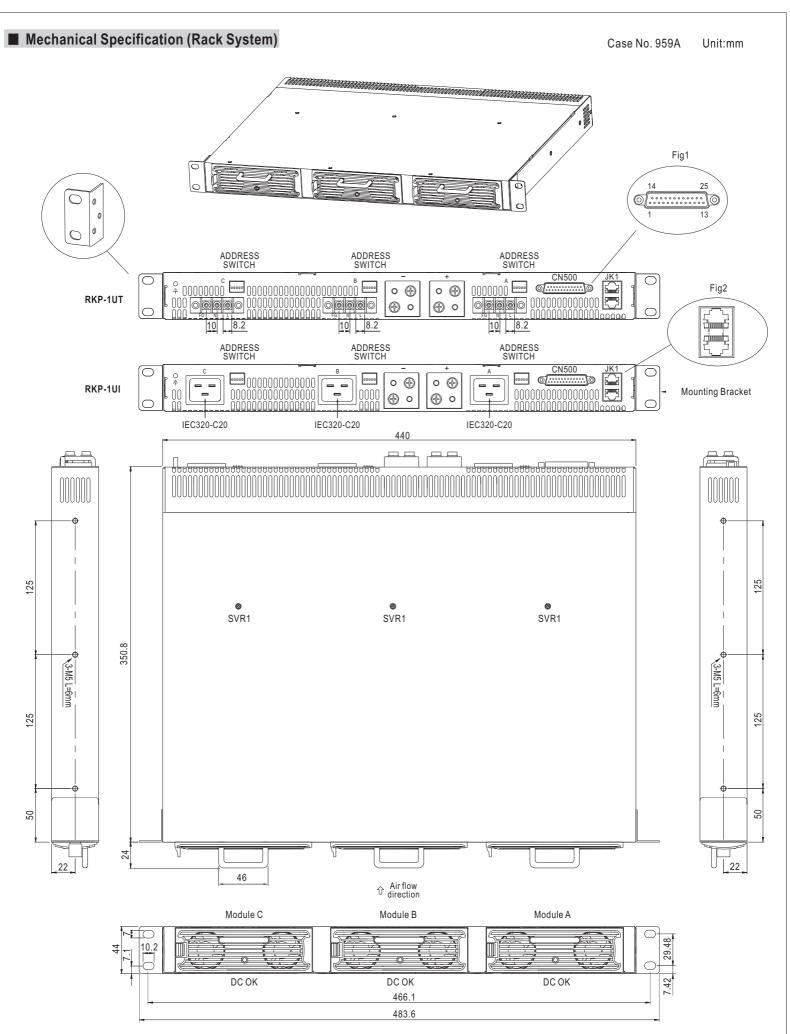



RKP-1U Rack System

■ CN500 Pin No. Assignment

Connector Pin No. Assignment(CN500): D-Type Right Angle 25 positions

Pin No.	Assignment								
1	ON/OFF-A	6	FAN FAIL-A	11	T-ALARM-B	16	ON/OFF-C	21	FAN FAIL-C
2	AC-OK-A	7	ON/OFF-B	12	FAN FAIL-B	17	AC-OK-C	22	+S
3	DC-OK-A	8	AC-OK-B	13	+5V-AUX	18	DC-OK-C	23	-S
4	PV-A	9	DC-OK-B	14	+12V-AUX	19	PV-C	24	+V
5	T-ALARM-A	10	PV-B	15	GND-AUX	20	T-ALARM-C	25	-V

■ JK1 Pin No. Assignment

Connector Pin No. Assignment(CN): RJ45 8 positions

Pin No.	Assignment	Pin No.	Assignment	Pin No.	Assignment
1	DA	4	CONTROL	7	SCL
2	DB	5	NC	8	GND-AUX
3	-V	6	SDA		

■ CN500 IN/OUT Connector pins function description

Pin No.	Function	Description
1,7,16	ON/OFF	Each unit can separately turn the output on and off by electrical signal or dry contact between ON/OFF A,B,C(pin 1,7,16) and +5V-AUX(pin 13). Short: ON, Open:OFF. (Note.2)
2,8,17	AC-OK	Low : When the input voltage is \ge 87Vrms. High : when the input voltage in \le 75Vrms. (Note.2)
3,9,18	DC-OK	High : When the Vout \leq 80 \pm 5%. Low : When Vout \geq 80 \pm 5%. (Note.2)
4,10,19	PV	Connection for output voltage trimming. The voltage can be trimmed within its defined range. (Note.1)
5,11,20	T-ALARM	High: When the internal temperature (TSW1 or TSW2 open) exceeds the limit of temperature alarm. Low: When the internal temperature (TSW1 or TSW2 short) under the limit temperature. (Note.2)
6,12,21	FAN FAIL	High : When the internal fan fail. Low : When the internal fan is normal. (Note.2)
13	+5V-AUX	Auxiliary voltage output, 4.5 ~ 5.5V, referenced to GND-AUX (pin 15). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by the remote ON/OFF control.
14	+12V-AUX	Auxiliary voltage output, 10.8 ~ 13.2V, referenced to GND-AUX (pin 15). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by the remote ON/OFF control.
15	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).
22	+S	Positive sensing. The +S signal should be connected to the positive terminal of the load. The +S and -S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V.
23	-S	Negative sensing. The -S signal should be connected to the negative terminal of the load. The -S and +S leads should be twisted in pair to minimize noise pick-up effect. The maximum line drop compensation is 0.5V.
24	+V	Positive output voltage. For local sense use only, can't be connected directly to the load.
25	-V	Negative output voltage. For local sense use only, can't be connected directly to the load.

■ JK1 IN/OUT Connector pins function description

Pin No.	Function	Description
1,2	DA,DB	Differential digital signal for parallel control. (Note.1)
3	-V	Negative output voltage. For parallel control, can't be connected directly to the load.
4	CONTROL	Remote ON/OFF control pin used in the PMBus interface. (Note.2)
5	NC	Not use.
6	SDA	Serial Data used in the PMBus interface. (Note.2)
7	SCL	Serial Clock used in the PMBus interface. (Note.2)
8	GND-AUX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).

Note.1: Non-isolated signal, referenced to the output terminals (-V).


Note.2: Isolated signal, referenced to GND-AUX.

■ Function Manual

1. Remote ON/OFF Control

 The PSU can be turned ON/OFF together or separately by using the "Remote ON/OFF" function.






Between ON/OFF and +5V-AUX	Output
SW Open	OFF
SW Short	ON

2. Voltage Drop Compensation

2.1 Remote Sense

 The remote sense compensates voltage drop on the load wiring up to 0.5V.



2.2 Local Sense

Notice: The +S,-S have to be connected to the +V,-V terminals locally in order to get the correct output voltage if the remote sensing is not used.



3. Output Voltage TRIM

- (1)Connecting an external DC source between PV(4,10,19) and -V(25) on CN500 that is shown in Fig. 3.1.
- (2)Adjustment of output voltage is possible between 90~110%(Typ.) of the rated output which is shown in Fig. 3.2. Reducing output current is required when the output voltage is trimmed up.

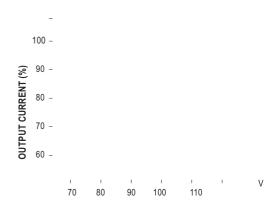


Fig. 3.1 Add on 0~5V external voltage

Fig. 3.2 Output voltage trimming

ERROR: undefinedresult OFFENDING COMMAND: stroke

STACK:

```
[9.62576 0.0 0.0 9.62577 -385.99 -542.981 ]
[9.62576 0.0 0.0 9.62577 -385.99 -542.981 ]
```