### Features

- Single Voltage Read/Write Operation: 2.65V to 3.6V
- Access Time 70 ns
- Sector Erase Architecture
  - Sixty-three 32K Word (64K Bytes) Sectors with Individual Write Lockout
  - Eight 4K Word (8K Bytes) Sectors with Individual Write Lockout
- Fast Word Program Time 10 μs
- Fast Sector Erase Time 100 ms
- Suspend/Resume Feature for Erase and Program
  - Supports Reading and Programming from Any Sector by Suspending Erase of a Different Sector
  - Supports Reading Any Word by Suspending Programming of Any Other Word
- Low-power Operation
  - 10 mA Active
  - 15 µA Standby
- VPP Pin for Write Protection and Accelerated Program Operation
- WP Pin for Sector Protection
- RESET Input for Device Initialization
- Flexible Sector Protection
- TSOP and CBGA Package Options
- Top or Bottom Boot Block Configuration Available
- 128-bit Protection Register
- Minimum 100,000 Erase Cycles
- Common Flash Interface (CFI)
- Green (Pb/Halide-free) Packaging

### 1. Description

The AT49BV320D(T) is a 2.7-volt 32-megabit Flash memory organized as 2,097,152 words of 16 bits each. The memory is divided into 71 sectors for erase operations. The device is offered in a 48-lead TSOP package and a 47-ball CBGA package. The device has  $\overline{CE}$  and  $\overline{OE}$  control signals to avoid any bus contention. This device can be read or reprogrammed using a single power supply, making it ideally suited for in-system programming.

The device powers on in the read mode. Command sequences are used to place the device in other operation modes such as program and erase. The device has the capability to protect the data in any sector (see "Flexible Sector Protection" on page 6).

To increase the flexibility of the device, it contains an Erase Suspend and Program Suspend feature. This feature will put the erase or program on hold for any amount of time and let the user read data from or program data to any of the remaining sectors within the memory.

The VPP pin provides data protection. When the  $V_{PP}$  input is below 0.4V, the program and erase functions are inhibited. When  $V_{PP}$  is at 1.65V or above, normal program and erase operations can be performed. With  $V_{PP}$  at 10.0V, the program (Dual-word Program command) operation is accelerated.





32-megabit (2M x 16) 3-volt Only Flash Memory

# AT49BV320D AT49BV320DT


3581D-FLASH-2/06



## 2. Pin Configurations

Pin Name	Function	
A0 - A20	Addresses	
CE	Chip Enable	
ŌĒ	Output Enable	
WE	Write Enable	
RESET	Reset	
VPP	Write Protection	
I/O0 - I/O15	Data Inputs/Outputs	
NC	No Connect	
VCCQ	Output Power Supply	
WP	Write Protect	

### 2.1 TSOP Top View (Type 1)

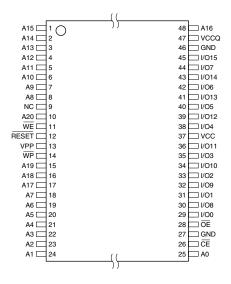


### 2.2 CBGA Top View (Ball Down)

	1	2	3	4	5	6	7	8	
	•								
Α	$\odot$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	
	A13	A11	A8	VPP	$\overline{WP}$	A19	A7	A4	
В	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	
	A14	A10	WE	RST	A18	A17	A5	A2	
С	$\bigcirc$	$\bigcirc$	$\bigcirc$		$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	
	A15	A12	A9		A20	A6	A3	A1	
D	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	
	A16	I/014	I/05	I/011	I/O2	I/08	CE	A0	
E	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	
	VCCQ	I/015	I/06	I/012	I/O3	I/09	I/O0	GND	
F	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\underline{\bigcirc}$	
	GND	I/07	I/013	I/04	VCC	I/O10	I/01	OE	

2 AT49BV320D(T)

# AT49BV320D(T)

### 3. Block Diagram

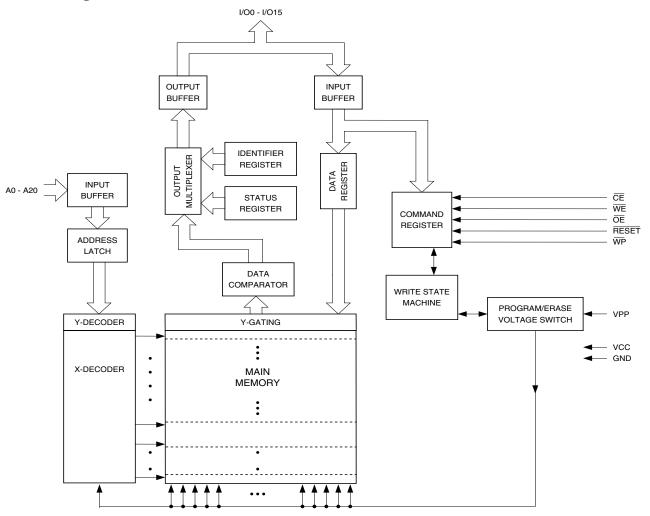

### 4. Device Operation

### 4.1 Command Sequences

When the device is first powered on, it will be in the read mode. In order to perform other device functions, a series of command sequences are entered into the device. The command sequences are shown in the "Command Definition Table" on page 15 (I/O8 - I/O15 are don't care inputs for the command codes). The command sequences are written by applying a low pulse on the  $\overline{WE}$  or  $\overline{CE}$  input with  $\overline{CE}$  or  $\overline{WE}$  low (respectively) and  $\overline{OE}$  high. The address and data are latched by the first rising edge of  $\overline{CE}$  or  $\overline{WE}$ . Standard microprocessor write timings are used. The address locations used in the command sequences are not affected by entering the command sequences.

### 4.2 Read

When the AT49BV320D(T) is in the read mode, with  $\overline{CE}$  and  $\overline{OE}$  low and  $\overline{WE}$  high, the data stored at the memory location determined by the address pins are asserted on the outputs. The





outputs are put in the high impedance state whenever  $\overline{CE}$  or  $\overline{OE}$  is high. This dual-line control gives designers flexibility in preventing bus contention.

### 4.3 Reset

A RESET input pin is provided to ease some system applications. When RESET is at a logic high level, the device is in its standard operating mode. A low level on the RESET input halts the present device operation and puts the outputs of the device in a high impedance state. When a high level is reasserted on the RESET pin, the device returns to the read mode, depending upon the state of the control inputs.

#### 4.4 Erase

Before a word can be reprogrammed, it must be erased. The erased state of memory bits is a logical "1". The individual sectors can be erased by using the Sector Erase command.

#### 4.4.1 Sector Erase

The device is organized into 71 sectors (SA0 - SA70) that can be individually erased. The Sector Erase command is a two-bus cycle operation. The sector address and the D0H Data Input command are latched on the rising edge of  $\overline{WE}$ . The sector erase starts after the rising edge of  $\overline{WE}$  of the second cycle provided the given sector has not been protected. The erase operation is internally controlled; it will automatically time to completion. The maximum time to erase a sector is t<sub>SEC</sub>. An attempt to erase a sector that has been protected will result in the operation terminating immediately.

#### 4.5 Word Programming

Once a memory sector is erased, it is programmed (to a logical "0") on a word-by-word basis. Programming is accomplished via the Internal Device command register and is a two-bus cycle operation. The device will automatically generate the required internal program pulses.

Any commands, except Read Status Register, Program Suspend and Program Resume, written to the chip during the embedded programming cycle will be ignored. If a hardware reset happens during programming, the data at the location being programmed will be corrupted. Please note that a data "0" cannot be programmed back to a "1"; only erase operations can convert "0"s to "1"s. Programming is completed after the specified  $t_{BP}$  cycle time. If the program status bit is a "1", the device was not able to verify that the program operation was performed successfully. The status register indicates the programming status. While the program sequence executes, status bit I/O7 is "0".

### 4.6 VPP Pin

The circuitry of the AT49BV320D(T) is designed so that the device cannot be programmed or erased if the  $V_{PP}$  voltage is less that 0.4V. When  $V_{PP}$  is at 1.65V or above, normal program and erase operations can be performed. The VPP pin cannot be left floating.

### 4.7 Read Status Register

The status register indicates the status of device operations and the success/failure of that operation. The Read Status Register command causes subsequent reads to output data from the status register until another command is issued. To return to reading from the memory, issue a Read command.

The status register bits are output on I/O7 - I/O0. The upper byte, I/O15 - I/O8, outputs 00H when a Read Status Register command is issued.

The contents of the status register [SR7:SR0] are latched on the falling edge of  $\overline{OE}$  or  $\overline{CE}$  (whichever occurs last), which prevents possible bus errors that might occur if status register contents change while being read.  $\overline{CE}$  or  $\overline{OE}$  must be toggled with each subsequent status read, or the status register will not indicate completion of a Program or Erase operation.

When the Write State Machine (WSM) is active, SR7 will indicate the status of the WSM; the remaining bits in the status register indicate whether the WSM was successful in performing the preferred operation (see Table 4-1).

WSMS	ESS	ES	PS	VPPS	PSS	SLS	R
7	6	5	4	3	2	1	0
					No	tes	
SR7 WRITE ST 1 = Ready 0 = Busy	ATE MACHINE S	STATUS (WSMS)				rst to determine \ ore checking prog	
1 = Erase Susp	SUSPEND STAT ended ogress/Complete			both WSMS and		WSM halts exect – ESS bit remains ssued.	
SR5 = ERASE 1 = Error in Sec 0 = Successful	tor Erase			When this bit is set to "1", WSM has applied the max number of erase pulses to the sector and is still unable to verify successful sector erasure.			
SR4 = PROGR 1 = Error in Pro 0 = Successful	• •	)		When this bit is program a worc		has attempted bu	It failed to
SR3 = VPP ST/ 1 = VPP Low D 0 = VPP OK	ATUS (VPPS) etect, Operation /	Abort		level. The WSM Erase comman system if V <sub>PP</sub> ha	l interrogates V <sub>PF</sub> d sequences hav	ide continuous ind b level only after to been entered a hed on. The V <sub>PP</sub> y the WSM.	ne Program or nd informs the
1 = Program Su	SR2 = PROGRAM SUSPEND STATUS (PSS) 1 = Program Suspended 0 = Program in Progress/Completed					ed, WSM halts ex o "1". PSS bit rem ind is issued.	
1 = Prog/Erase	<ul> <li>SR1 = SECTOR LOCK STATUS (SLS)</li> <li>1 = Prog/Erase attempted on a locked sector; Operation aborted.</li> <li>0 = No operation to locked sectors</li> </ul>			If a Program or Erase operation is attempted to one of the locked sectors, this bit is set by the WSM. The operation specified is aborted and the device is returned to read status mode.			
		RE ENHANCEME			e status register.	e and should be n	nasked out

 Table 4-1.
 Status Register Bit Definition

Note: 1. A Command Sequence Error is indicated when SR1, SR3, SR4 and SR5 are set.





#### 4.7.1 Clear Status Register

The WSM can set status register bits 1 through 7 and can clear bits 2, 6 and 7; but, the WSM cannot clear status register bits 1, 3, 4 or 5. Because bits 1, 3, 4 and 5 indicate various error conditions, these bits can be cleared only through the Clear Status Register command. By allowing the system software to control the resetting of these bits, several operations may be performed (such as cumulatively programming several addresses or erasing multiple sectors in sequence) before reading the status register to determine if an error occurred during those operations. The status register should be cleared before beginning another operation. The Read command must be issued before data can be read from the memory array. The status register can also be cleared by resetting the device.

### 4.8 Flexible Sector Protection

The AT49BV320D(T) offers two sector protection modes, the Softlock and the Hardlock. The Softlock mode is optimized as sector protection for sectors whose content changes frequently. The Hardlock protection mode is recommended for sectors whose content changes infrequently. Once either of these two modes is enabled, the contents of the selected sector is read-only and cannot be erased or programmed. Each sector can be independently programmed for either the Softlock or Hardlock sector protection mode. At power-up and reset, all sectors have their Softlock protection mode enabled.

#### 4.8.1 Softlock and Unlock

The Softlock protection mode can be disabled by issuing a two-bus cycle Unlock command to the selected sector. Once a sector is unlocked, its contents can be erased or programmed. To enable the Softlock protection mode, a two-bus cycle Softlock command must be issued to the selected sector.

#### 4.8.2 Hardlock and Write Protect


The Hardlock sector protection mode operates in conjunction with the Write Protect ( $\overline{WP}$ ) pin. The Hardlock sector protection mode can be enabled by issuing a two-bus cycle Hardlock Software command to the selected sector. The state of the Write Protect pin affects whether the Hardlock protection mode can be overridden.

- When the WP pin is low and the Hardlock protection mode is enabled, the sector cannot be unlocked and the contents of the sector is read-only.
- When the WP pin is high, the Hardlock protection mode is overridden and the sector can be unlocked via the Unlock command.
- To disable the Hardlock sector protection mode, the chip must be either reset or power cycled.

V <sub>PP</sub>	WP	Hard- lock	Soft- lock	Erase/ Prog Allowed?	Comments
V <sub>CC</sub> /5V	0	0	0	Yes	No sector is locked
V <sub>CC</sub> /5V	0	0	1	No	Sector is Softlocked. The Unlock command can unlock the sector.
V <sub>CC</sub> /5V	0	1	1	No	Hardlock protection mode is enabled. The sector cannot be unlocked.
$V_{CC}/5V$	1	0	0	Yes	No sector is locked.
V <sub>CC</sub> /5V	1	0	1	No	Sector is Softlocked. The Unlock command can unlock the sector.
V <sub>CC</sub> /5V	1	1	0	Yes	Hardlock protection mode is overridden and the sector is not locked.
V <sub>CC</sub> /5V	1	1	1	No	Hardlock protection mode is overridden and the sector can be unlocked via the Unlock command.
V <sub>IL</sub>	х	x	х	No	Erase and Program Operations cannot be performed.

 Table 4-2.
 Hardlock and Softlock Protection Configurations in Conjunction with WP



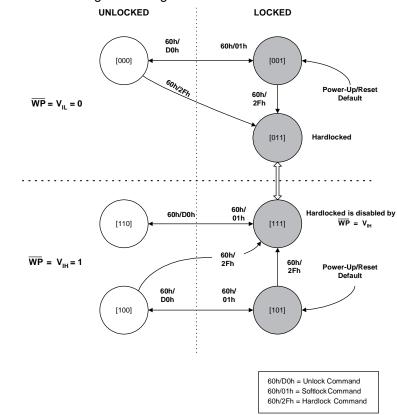

Note: 1. The notation [X, Y, Z] denotes the locking state of a sector. The current locking state of a sector is defined by the state of WP and the two bits of the sector-lock status D[1:0].





#### 4.8.3 Sector Protection Detection

A software method is available to determine if the sector protection Softlock or Hardlock features are enabled. When the device is in the software product identification mode, a read from the I/O0 and I/O1 at address location 00002H within a sector will show if the sector is unlocked, softlocked, or hardlocked.

I/O1	I/O0	Sector Protection Status	
0	0	Sector Not Locked	
0	1	Softlock Enabled	
1	0	Hardlock Enabled	
1	1	Both Hardlock and Softlock Enabled	

 Table 4-3.
 Sector Protection Status

### 4.9 Erase Suspend/Erase Resume

The Erase Suspend command allows the system to interrupt a sector erase operation and then program or read data from a different sector within the memory. After the Erase Suspend command is given, the device requires a maximum time of 15 µs to suspend the erase operation. After the erase operation has been suspended, the system can then read data or program data to any other sector within the device. An address is not required during the Erase Suspend command. During a sector erase suspend, another sector cannot be erased. To resume the sector erase operation, the system must write the Erase Resume command. The Erase Resume command is a one-bus cycle command. The only valid commands while erase is suspended are Read Status Register, Product ID Entry, CFI Query, Program, Program Resume, Erase Resume, Sector Softlock/Hardlock, Sector Unlock.

### 4.10 Program Suspend/Program Resume

The Program Suspend command allows the system to interrupt a programming operation and then read data from a different word within the memory. After the Program Suspend command is given, the device requires a maximum of 20 µs to suspend the programming operation. After the programming operation has been suspended, the system can then read data from any other word within the device. An address is not required during the program suspend operation. To resume the programming operation, the system must write the Program Resume command. The program suspend and resume are one-bus cycle commands. The command sequence for the erase suspend and program suspend are the same and the command sequence for the erase resume and program resume are the same. The only other valid commands while program is suspended are Read Status Register, Product ID Entry, CFI Query and Program Resume.

### 4.11 Product Identification

The product identification mode identifies the device and manufacturer as Atmel. It may be accessed by a software operation. For details, see "Operating Modes" on page 21.

### 4.12 128-bit Protection Register

The AT49BV320D(T) contains a 128-bit register that can be used for security purposes in system design. The protection register is divided into two 64-bit sectors. The two sectors are designated as sector A and sector B. The data in sector A is non-changeable and is programmed at the factory with a unique number. The data in sector B is programmed by the user and can be locked out such that data in the sector cannot be reprogrammed. To program sector

# 8 AT49BV320D(T)

B in the protection register, the two-bus cycle Program Protection Register command must be used as shown in the "Command Definition Table" on page 15. To lock out sector B, the two-bus cycle Lock Protection Register command must be used as shown in the "Command Definition Table". Data bit D1 must be zero during the second bus cycle. All other data bits during the second bus cycle are don't cares. To determine whether sector B is locked out, use the status of sector B protection command. If data bit D1 is zero, sector B is locked. If data bit D1 is one, sector B can be reprogrammed. Please see the "Protection Register Addressing Table" on page 16 for the address locations in the protection register. To read the protection register, the Product ID Entry command is given followed by a normal read operation from an address within the protection register. After determining whether sector B is protected or not, or reading the protection register, the Read command must be given to return to the read mode.

### 4.13 Common Flash Interface (CFI)

CFI is a published, standardized data structure that may be read from a flash device. CFI allows system software to query the installed device to determine the configurations, various electrical and timing parameters and functions supported by the device. CFI is used to allow the system to learn how to interface to the flash device most optimally. The two primary benefits of using CFI are ease of upgrading and second source availability. The command to enter the CFI Query mode is a one-bus cycle command which requires writing data 98h to any address. The CFI Query command can be written when the device is ready to read data or can also be written when the part is in the product ID mode. Once in the CFI Query mode, the system can read CFI data at the addresses given in "Common Flash Interface Definition Table" on page 27. To return to the read mode, issue the Read command.

### 4.14 Hardware Data Protection

The Hardware Data Protection feature protects against inadvertent programs to the AT49BV320D(T) in the following ways: (a)  $V_{CC}$  sense: if  $V_{CC}$  is below 1.8V (typical), the program function is inhibited. (b)  $V_{CC}$  power-on delay: once  $V_{CC}$  has reached the  $V_{CC}$  sense level, the device will automatically time out 10 ms (typical) before programming. (c) Program inhibit: holding any one of  $\overline{OE}$  low,  $\overline{CE}$  high or  $\overline{WE}$  high inhibits program cycles. (d) Program inhibit:  $V_{PP}$  is less than  $V_{ILPP}$ .

### 4.15 Input Levels

While operating with a 2.65V to 3.6V power supply, the address inputs and control inputs ( $\overline{OE}$ ,  $\overline{CE}$  and  $\overline{WE}$ ) may be driven from 0 to 5.5V without adversely affecting the operation of the device. The I/O lines can only be driven from 0 to V<sub>CCQ</sub> + 0.6V.


### 4.16 Output Levels

For the AT49BV320D(T), output high levels (V<sub>OH</sub>) are equal to V<sub>CCQ</sub> - 0.1V (not V<sub>CC</sub>). For 2.65V - 3.6V output levels, V<sub>CCQ</sub> must be tied to V<sub>CC</sub>.





### 5. Word Program Flowchart

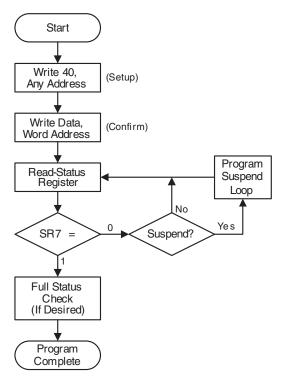


## 6. Word Program Procedure

Bus Operation	Command	Comments		
Write	Program Setup	Data = 40 Addr = Any Address		
Write	Data	Data = Data to program Addr = Location to program		
Read	None	Status register data: Toggle $\overline{CE}$ or $\overline{OE}$ to update status register		
Idle	None	Check SR7 1 = WSM Ready 0 = WSM Busy		
Repeat for s	Repeat for subsequent Word Program operations.			

Full status register check can be done after each program, or after a sequence of program operations.

Write FF after the last operation to set to the Read state.

## 7. Full Status Check Flowchart

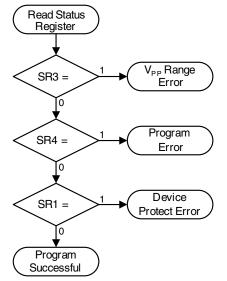


## 8. Full Status Check Procedure

Bus Operation	Command	Comments
Idle	None	Check SR3: 1 = V <sub>PP</sub> Error
Idle	None	Check SR4: 1 = Data Program Error
Idle	None	Check SR1: 1 = Sector locked; operation aborted

SR3 MUST be cleared before the Write State Machine allows further program attempts.

If an error is detected, clear the status register before continuing operations – only the Clear Status Register command clears the status register error bits.

## 9. Program Suspend/Resume Flowchart

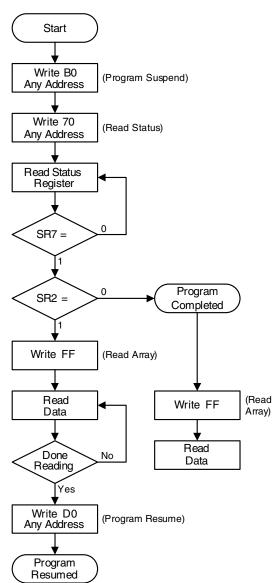


### 10. Program Suspend/Resume Procedure

Bus Operation	Command	Comments
Write	Program Suspend	Data = B0 Addr = Any address
Write	Read Status	Data = 70 Addr = Any address
Read	None	Status register data: Toggle $\overline{CE}$ or $\overline{OE}$ to update status register Addr = Any address
ldle	None	Check SR7 1 = WSM Ready 0 = WSM Busy
ldle	None	Check SR2 1 = Program suspended 0 = Program completed
Write	Read Array	Data = FF Addr = Any address
Read	None	Read data from any word in the memory
Write	Program Resume	Data = D0 Addr = Any address





### **11. Sector Erase Flowchart**

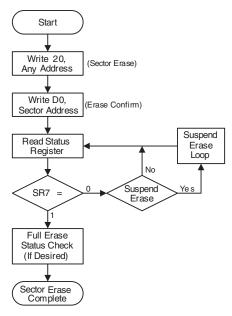


## 12. Sector Erase Procedure

Bus Operation	Command	Comments		
Write	Sector Erase Setup	Data = 20 Addr = Any address		
Write	Erase Confirm	Data = D0 Addr = Sector to be erased (SA)		
Read	None	Status register data: Toggle $\overline{CE}$ or $\overline{OE}$ to update status register data		
Idle     None     Check SR7       0 = WSM Ready     0 = WSM Busy				
Repeat for subsequent sector erasures. Full status register check can be done after each sector erase,				

or after a sequence of sector erasures.

Write FF after the last operation to enter read mode.

### 13. Full Erase Status Check Flowchart

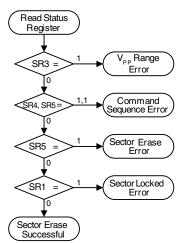

## 14. Full Erase Status Check Procedure


Bus Operation	Command	Comments		
Idle	None	Check SR3: 1 = V <sub>PP</sub> Range Error		
Idle	None	Check SR4, SR5: Both 1 = Command Sequence Error		
Idle	None	Check SR5: 1 = Sector Erase Error		
Idle	None	Check SR1: 1 = Attempted erase of locked sector; erase aborted.		
SR1. SR3 m	SB1. SB3 must be cleared before the Write State Machine			

SR1, SR3 must be cleared before the Write State Machine allows further erase attempts.

Only the Clear Status Register command clears SR1, SR3, SR4, SR5.

If an error is detected, clear the status register before attempting an erase retry or other error recovery.

## 15. Erase Suspend/Resume Flowchart

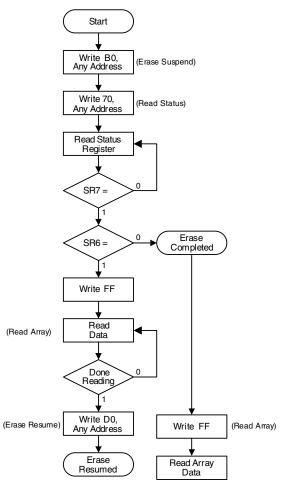


Bus Operation	Command	Comments
Write	Erase Suspend	Data = B0 Addr = Any address
Write	Read Status	Data = 70 Addr = Any address
Read	None	Status register data: Toggle $\overline{CE}$ or $\overline{OE}$ to update status register Addr = Any address
Idle	None	Check SR7 1 = WSM Ready 0 = WSM Busy
Idle	None	Check SR6 1 = Erase suspended 0 = Erase completed
Write	Read or Program	Data = FF or 40 Addr = Any address
Read or Write	None	Read or program data from/to sector other than the one being erased
Write	Program Resume	Data = D0 Addr = Any address

## 16. Erase Suspend/Resume Procedure





### 17. Protection Register Programming Flowchart

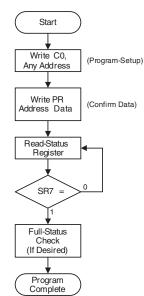

### 18. Protection Register Programming Procedure


Bus Operation	Command	Comments			
Write	Program PR Setup	Data = C0 Addr = Any address			
Write	Protection Program	Data = Data to Program Addr = Location to Program			
Read	None	Status register data: Toggle $\overline{CE}$ or $\overline{OE}$ to update status register data			
Idle	None	Check SR7 1 = WSM Ready 0 = WSM Busy			
within the proof	Program Protection Register operation addresses must be within the protection register address space. Addresses outside this space will return an error. Repeat for subsequent programming operations.				

Repeat for subsequent programming operations.

Full status register check can be done after each program, or after a sequence of program operations.

Write FF after the last operation to return to the Read mode.

## **19. Full Status Check Flowchart**

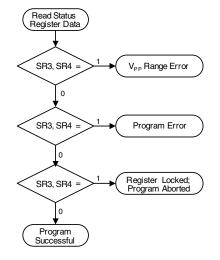

## 20. Full Status Check Procedure

Bus Operation	Command	Comments		
Idle	None	Check SR1, SR3, SR4: 0,1,1 = V <sub>PP</sub> Range Error		
Idle	None	Check SR1, SR3, SR4: 0,0,1 = Programming Error		
Idle         None         Check SR1, SR3, SR4:           1, 0,1 = Sector locked; operation aborted				
further progr	am attempts.	the Write State Machine allows		

Only the Clear Status Register command clears SR1, SR3, SR4.

If an error is detected, clear the status register before attempting a program retry or other error recovery.

## 21. Command Definition Table

	Bus		1st Bus Cycle		Bus cle	3rd Bus Cycle	
Command Sequence	Cycles	Addr	Data	Addr	Data	Addr	Data
Read	1	XX	FF				
Sector Erase/Confirm	2	XX	20	SA <sup>(2)</sup>	D0		
Word Program	2	XX	40/10	Addr	D <sub>IN</sub>		
Dual-word Program <sup>(3)</sup>	3	XX	E0	Addr0	D <sub>IN0</sub>	Addr1	D <sub>IN1</sub>
Erase/Program Suspend	1	XX	B0				
Erase/Program Resume	1	XX	D0				
Product ID Entry	1	XX	90				
Sector Softlock	2	XX	60	SA <sup>(2)</sup>	01		
Sector Hardlock	2	XX	60	SA <sup>(2)</sup>	2F		
Sector Unlock	2	XX	60	SA <sup>(2)</sup>	D0		
Read Status Register	2	XX	70	XX	D <sub>OUT</sub> <sup>(4)</sup>		
Clear Status Register	1	XX	50				
Program Protection Register	2	XX	C0	Addr <sup>(5)</sup>	D <sub>IN</sub>		
Lock Protection Register – Sector B	2	XX	C0	80	FFFD		
Status of Sector B Protection	2	XX	90	80	D <sub>OUT</sub> <sup>(6)</sup>		
CFI Query	1	XX	98				

Notes: 1. The DATA FORMAT shown for each bus cycle is as follows; I/O7 - I/O0 (Hex). I/O15 - I/O8 are don't care. The ADDRESS FORMAT shown for each bus cycle is as follows: A7 - A0 (Hex). Address A20 through A8 are don't care.

2. SA = sector address. Any word address within a sector can be used to designate the sector address (see pages 17 - 20 for details).

 This fast programming option enables the user to program two words in parallel only when V<sub>PP</sub> = 9.5V. The addresses, Addr0 and Addr1, of the two words, D<sub>IN0</sub> and D<sub>IN1</sub>, must only differ in address A0. This command should be used during manufacturing purposes only.

4. The status register bits are output on I/O7 - I/O0.

5. Any addresses within the user programmable protection register region. Address locations are shown on "Protection Register Addressing Table" on page 16.

6. If data bit D1 is "0", sector B is locked. If data bit D1 is "1", sector B can be reprogrammed.

## 22. Absolute Maximum Ratings\*

Temperature under Bias55°C to +125°C
Storage Temperature65°C to +150°C
All Input Voltages (including NC Pins) with Respect to Ground0.6V to +6.25V
All Output Voltages with Respect to Ground0.6V to $V_{CC}$ + 0.6V
Voltage on V <sub>PP</sub> with Respect to Ground0.6V to +10.0V

\*NOTICE: Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.





## 23. Protection Register Addressing Table

Address	Use	Sector	A7	A6	A5	A4	A3	A2	A1	A0
81	Factory	А	1	0	0	0	0	0	0	1
82	Factory	А	1	0	0	0	0	0	1	0
83	Factory	А	1	0	0	0	0	0	1	1
84	Factory	А	1	0	0	0	0	1	0	0
85	User	В	1	0	0	0	0	1	0	1
86	User	В	1	0	0	0	0	1	1	0
87	User	В	1	0	0	0	0	1	1	1
88	User	В	1	0	0	0	1	0	0	0

Note: All address lines not specified in the above table must be "0" when accessing the protection register, i.e., A20 - A8 = 0.

# 16 AT49BV320D(T)

# AT49BV320D(T)

## 24. AT49BV320D Sector Address Table

Sector	Size (Bytes/Words)	Address Range (A20 - A0)		
SA0	8K/4K	00000 - 00FFF		
SA1	8K/4K	01000 - 01FFF		
SA2	8K/4K	02000 - 02FFF		
SA3	8K/4K	03000 - 03FFF		
SA4	8K/4K	04000 - 04FFF		
SA5	8K/4K	05000 - 05FFF		
SA6	8K/4K	06000 - 06FFF		
SA7	8K/4K	07000 - 07FFF		
SA8	64K/32K	08000 - 0FFFF		
SA9	64K/32K	10000 - 17FFF		
SA10	64K/32K	18000 - 1FFFF		
SA11	64K/32K	20000 - 27FFF		
SA12	64K/32K	28000 - 2FFFF		
SA13	64K/32K	30000 - 37FFF		
SA14	64K/32K	38000 - 3FFFF		
SA15	64K/32K	40000 - 47FFF		
SA16	64K/32K	48000 - 4FFFF		
SA17	64K/32K	50000 - 57FFF		
SA18	64K/32K	58000 - 5FFFF		
SA19	64K/32K	60000 - 67FFF		
SA20	64K/32K	68000 - 6FFF		
SA21	64K/32K	70000 - 77FFF		
SA22	64K/32K	78000 - 7FFFF		
SA23	64K/32K	80000 - 87FFF		
SA24	64K/32K	88000 - 8FFFF		
SA25	64K/32K	90000 - 97FFF		
SA26	64K/32K	98000 - 9FFFF		
SA27	64K/32K	A0000 - A7FFF		
SA28	64K/32K	A8000 - AFFFF		
SA29	64K/32K	B0000 - B7FFF		
SA30	64K/32K	B8000 - BFFFF		
SA31	64K/32K	C0000 - C7FFF		
SA32	64K/32K	C8000 - CFFFF		
SA33	64K/32K	D0000 - D7FFF		
SA34	64K/32K	D8000 - DFFFF		
SA35	64K/32K	E0000 - E7FFF		
SA36	64K/32K	E8000 - EFFFF		
SA37	64K/32K	F0000 - F7FFF		





## 24. AT49BV320D Sector Address Table (Continued)

Sector	Size (Bytes/Words)	Address Range (A20 - A0)		
SA38	64K/32K	F8000 - FFFFF		
SA39	64K/32K	100000 - 107FFF		
SA40	64K/32K	108000 - 10FFFF		
SA41	64K/32K	110000 - 117FFF		
SA42	64K/32K	118000 - 11FFFF		
SA43	64K/32K	120000 - 127FFF		
SA44	64K/32K	128000 - 12FFFF		
SA45	64K/32K	130000 - 137FFF		
SA46	64K/32K	138000 - 13FFFF		
SA47	64K/32K	140000 - 147FFF		
SA48	64K/32K	148000 - 14FFFF		
SA49	64K/32K	150000 - 157FFF		
SA50	64K/32K	158000 - 15FFFF		
SA51	64K/32K	160000 - 167FFF		
SA52	64K/32K	168000 - 16FFFF		
SA53	64K/32K	170000 - 177FFF		
SA54	64K/32K	178000 - 17FFFF		
SA55	64K/32K	180000 - 187FFF		
SA56	64K/32K	188000 - 18FFFF		
SA57	64K/32K	190000 - 197FFF		
SA58	64K/32K	198000 - 19FFFF		
SA59	64K/32K	1A0000 - 1A7FFF		
SA60	64K/32K	1A8000 - 1AFFFF		
SA61	64K/32K	1B0000 - 1B7FFF		
SA62	64K/32K	1B8000 - 1BFFFF		
SA63	64K/32K	1C0000 - 1C7FFF		
SA64	64K/32K	1C8000 - 1CFFFF		
SA65	64K/32K	1D0000 - 1D7FFF		
SA66	64K/32K	1D8000 - 1DFFFF		
SA67	64K/32K	1E0000 - 1E7FFF		
SA68	64K/32K	1E8000 - 1EFFFF		
SA69	64K/32K	1F0000 -1F7FFF		
SA70	64K/32K	1F8000 - 1FFFFF		

## 25. AT49BV320DT – Sector Address Table

Sector	Size (Bytes/Words)	Address Range (A20 - A0)
SA0	64K/32K	00000 - 07FFF
SA1	64K/32K	08000 - 0FFF
SA2	64K/32K	10000 - 17FFF
SA3	64K/32K	18000 - 1FFFF
SA4	64K/32K	20000 - 27FFF
SA5	64K/32K	28000 - 2FFF
SA6	64K/32K	30000 - 37FFF
SA7	64K/32K	38000 - 3FFFF
SA8	64K/32K	40000 - 47FFF
SA9	64K/32K	48000 - 4FFF
SA10	64K/32K	50000 - 57FFF
SA11	64K/32K	58000 - 5FFFF
SA12	64K/32K	60000 - 67FFF
SA13	64K/32K	68000 - 6FFFF
SA14	64K/32K	70000 - 77FFF
SA15	64K/32K	78000 - 7FFFF
SA16	64K/32K	80000 - 87FFF
SA17	64K/32K	88000 - 8FFFF
SA18	64K/32K	90000 - 97FFF
SA19	64K/32K	98000 - 9FFFF
SA20	64K/32K	A0000 - A7FFF
SA21	64K/32K	A8000 - AFFFF
SA22	64K/32K	B0000 - B7FFF
SA23	64K/32K	B8000 - BFFFF
SA24	64K/32K	C0000 - C7FFF
SA25	64K/32K	C8000 - CFFFF
SA26	64K/32K	D0000 - D7FFF
SA27	64K/32K	D8000 - DFFFF
SA28	64K/32K	E0000 - E7FFF
SA29	64K/32K	E8000 - EFFFF
SA30	64K/32K	F0000 - F7FFF
SA31	64K/32K	F8000 - FFFFF
SA32	64K/32K	100000 - 107FFF
SA33	64K/32K	108000 - 10FFFF
SA34	64K/32K	110000 - 117FFF
SA35	64K/32K	118000 - 11FFFF
SA36	64K/32K	120000 - 127FFF
SA37	64K/32K	128000 - 12FFFF





## 25. AT49BV320DT – Sector Address Table (Continued)

Sector	Size (Bytes/Words)	Address Range (A20 - A0)
SA38	64K/32K	130000 - 137FFF
SA39	64K/32K	138000 - 13FFFF
SA40	64K/32K	140000 - 147FFF
SA41	64K/32K	148000 - 14FFFF
SA42	64K/32K	150000 - 157FFF
SA43	64K/32K	158000 - 15FFFF
SA44	64K/32K	160000 - 167FFF
SA45	64K/32K	168000 - 16FFFF
SA46	64K/32K	170000 - 177FFF
SA47	64K/32K	178000 - 17FFFF
SA48	64K/32K	180000 - 187FFF
SA49	64K/32K	188000 - 18FFFF
SA50	64K/32K	190000 - 197FFF
SA51	64K/32K	198000 - 19FFFF
SA52	64K/32K	1A0000 - 1A7FFF
SA53	64K/32K	1A8000 - 1AFFFF
SA54	64K/32K	1B0000 - 1B7FFF
SA55	64K/32K	1B8000 - 1BFFFF
SA56	64K/32K	1C0000 - 1C7FFF
SA57	64K/32K	1C8000 - 1CFFFF
SA58	64K/32K	1D0000 - 1D7FFF
SA59	64K/32K	1D8000 - 1DFFFF
SA60	64K/32K	1E0000 - 1E7FFF
SA61	64K/32K	1E8000 - 1EFFFF
SA62	64K/32K	1F0000 - 1F7FFF
SA63	8K/4K	1F8000 - 1F8FFF
SA64	8K/4K	1F9000 - 1F9FFF
SA65	8K/4K	1FA000 - 1FAFFF
SA66	8K/4K	1FB000 - 1FBFFF
SA67	8K/4K	1FC000 - 1FCFFF
SA68	8K/4K	1FD000 - 1FDFFF
SA69	8K/4K	1FE000 - 1FEFFF
SA70	8K/4K	1FF000 - 1FFFFF

## 26. DC and AC Operating Range

		AT49BV320D(T)-70
Operating Temperature (Case)	Ind.	-40°C - 85°C
V <sub>CC</sub> Power Supply		2.65V to 3.6V

## 27. Operating Modes

Mode	CE	ŌĒ	WE	RESET	$V_{PP}^{(1)}$	Ai	I/O
Read	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IH</sub>	X <sup>(2)</sup>	Ai	D <sub>OUT</sub>
Program/Erase <sup>(3)</sup>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IHPP</sub> <sup>(4)</sup>	Ai	D <sub>IN</sub>
Standby/Program Inhibit	V <sub>IH</sub>	X <sup>(2)</sup>	Х	V <sub>IH</sub>	Х	X	High-Z
	Х	Х	V <sub>IH</sub>	V <sub>IH</sub>	Х		
Program Inhibit	Х	V <sub>IL</sub>	Х	V <sub>IH</sub>	Х		
	Х	Х	Х	V <sub>IH</sub>	V <sub>ILPP</sub> <sup>(5)</sup>		
Output Disable	Х	V <sub>IH</sub>	Х	V <sub>IH</sub>	Х		High-Z
Reset	Х	Х	Х	V <sub>IL</sub>	Х	Х	High-Z
Product Identification				N/		A0 = V <sub>IL</sub> , A1 - A20 = V <sub>IL</sub>	Manufacturer Code <sup>(6)</sup>
Software				V <sub>IH</sub>		A0 = V <sub>IH</sub> , A1 - A20 = V <sub>IL</sub>	Device Code <sup>(6)</sup>

Notes: 1. The VPP pin can be tied to  $V_{CC}$ . For faster program operations,  $V_{PP}$  can be set to 9.5V ± 0.5V.

X can be V<sub>IL</sub> or V<sub>IH</sub>.
 Refer to AC programming waveforms on page 26.

4. V<sub>IHPP</sub> (min) = 1.65V.

5.  $V_{ILPP}$  (max) = 0.4V.

6. Manufacturer Code: 001FH, Device Code: 90C5H - AT49BV320D; 90C4H - AT49BV320DT





## 28. DC Characteristics


Symbol	Parameter	Condition	Min	Тур	Max	Units
ILI	Input Load Current	$V_{IN} = 0V$ to $V_{CC}$			2	μΑ
I <sub>LO</sub>	Output Leakage Current	$V_{I/O} = 0V$ to $V_{CC}$			2	μA
I <sub>SB</sub>	V <sub>CC</sub> Standby Current CMOS	$\overline{CE} = V_{CC} - 0.3V$ to $V_{CC}$		15	25	μΑ
I <sub>CC</sub> <sup>(1)</sup>	V <sub>CC</sub> Active Read Current	f = 5 MHz; I <sub>OUT</sub> = 0 mA		10	15	mA
I <sub>CC1</sub>	V <sub>CC</sub> Programming Current				25	mA
I <sub>PP1</sub>	V <sub>PP</sub> Input Load Current				10	μA
V <sub>IL</sub>	Input Low Voltage				0.6	V
V <sub>IH</sub>	Input High Voltage		V <sub>CCQ</sub> - 0.6			V
V <sub>OL</sub>	Output Low Voltage	I <sub>OL</sub> = 2.1 mA			0.45	V
V <sub>OH</sub>	Output High Voltage	I <sub>OH</sub> = -100 μA	V <sub>CCQ</sub> - 0.1			V

Note: 1. In the erase mode,  $I_{CC}$  is 25 mA.

# 22 AT49BV320D(T)


# AT49BV320D(T)

## 29. Input Test Waveforms and Measurement Level



 $t_R, t_F < 5 ns$ 

## 30. Output Test Load

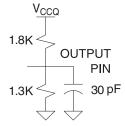

## 31. Pin Capacitance

 $f = 1 \text{ MHz}, T = 25^{\circ}C^{(1)}$ 

Symbol	Тур	Мах	Units	Conditions
C <sub>IN</sub>	4	6	pF	$V_{IN} = 0V$
C <sub>OUT</sub>	8	12	pF	$V_{OUT} = 0V$

Note: This parameter is characterized and is not 100% tested.






## 32. AC Read Characteristics

		AT49BV3		
Symbol	Parameter	Min	Max	Units
t <sub>RC</sub>	Read Cycle Time	70		ns
t <sub>ACC</sub>	Address to Output Delay		70	ns
t <sub>CE</sub> <sup>(1)</sup>	CE to Output Delay		70	ns
t <sub>OE</sub> <sup>(2)</sup>	OE to Output Delay	0	20	ns
t <sub>DF</sub> <sup>(3)(4)</sup>	$\overline{CE}$ or $\overline{OE}$ to Output Float	0	25	ns
t <sub>OH</sub>	Output Hold from OE, CE or Address, whichever occurred first	0		ns
t <sub>RO</sub>	RESET to Output Delay		100	ns

## 33. AC Read Waveforms $^{(1)(2)(3)(4)}$

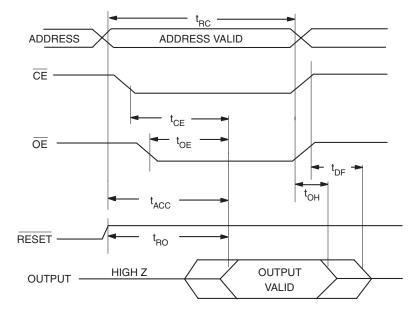

- Notes: 1.  $\overline{CE}$  may be delayed up to  $t_{ACC}$   $t_{CE}$  after the address transition without impact on  $t_{ACC}$ . 2.  $\overline{OE}$  may be delayed up to  $t_{CE}$   $t_{OE}$  after the falling edge of  $\overline{CE}$  without impact on  $t_{CE}$  or by  $t_{ACC}$   $t_{OE}$  after an address change without impact on  $t_{ACC}$ . 3.  $t_{DF}$  is specified from  $\overrightarrow{OE}$  or  $\overrightarrow{CE}$ , whichever occurs first (CL = 5 pF).

  - 4. This parameter is characterized and is not 100% tested.


# AT49BV320D(T)

## 34. AC Word Load Characteristics


Symbol	Parameter	Min	Max	Units
t <sub>AS</sub> , t <sub>OES</sub>	Address, OE Setup Time	20		ns
t <sub>AH</sub>	Address Hold Time	0		ns
t <sub>cs</sub>	Chip Select Setup Time	0		ns
t <sub>CH</sub>	Chip Select Hold Time	0		ns
t <sub>WP</sub>	Write Pulse Width ( $\overline{WE}$ or $\overline{CE}$ )	25		ns
t <sub>WPH</sub>	Write Pulse Width High	15		ns
t <sub>DS</sub>	Data Setup Time	25		ns
t <sub>DH</sub> , t <sub>OEH</sub>	Data, OE Hold Time	0		ns

## 35. AC Word Load Waveforms

### 35.1 WE Controlled

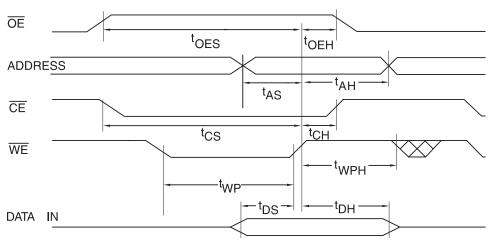

## 35.2 CE Controlled

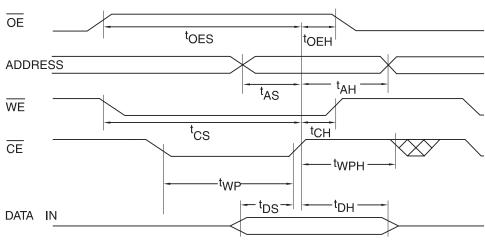







## 36. Program Cycle Characteristics

Symbol	Parameter	Min	Тур	Max	Units
t <sub>BP</sub>	Word Programming Time		10	120	μs
t <sub>BPD</sub>	Word Programming Time in Dual Programming Mode		5	60	μs
t <sub>AS</sub>	Address Setup Time	20			ns
t <sub>AH</sub>	Address Hold Time	0			ns
t <sub>DS</sub>	Data Setup Time	25			ns
t <sub>DH</sub>	Data Hold Time	0			ns
t <sub>WP</sub>	Write Pulse Width	25			ns
t <sub>WPH</sub>	Write Pulse Width High	15			ns
t <sub>wc</sub>	Write Cycle Time	70			ns
t <sub>RP</sub>	Reset Pulse Width	500			ns
t <sub>SEC1</sub>	Sector Erase Cycle Time (4K Word Sectors)		0.1	2	seconds
t <sub>SEC2</sub>	Sector Erase Cycle Time (32K Word Sectors)		0.5	6.0	seconds
t <sub>ES</sub>	Erase Suspend Time			15	μs
t <sub>PS</sub>	Program Suspend Time			10	μs

## 37. Program Cycle Waveforms

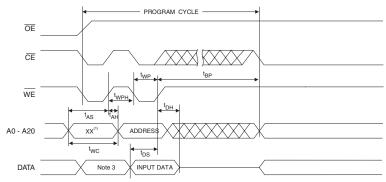

## 38. Sector Erase Cycle Waveforms

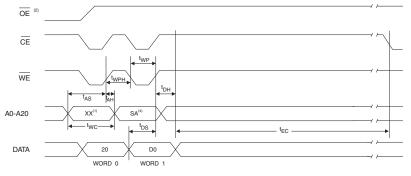

#### Notes: 1. Any address can be used to load the data.

- 2.  $\overrightarrow{OE}$  must be high only when  $\overrightarrow{WE}$  and  $\overrightarrow{CE}$  are both low.
- 3. The data can be 40H or 10H.
- 4. The address depends on what sector is to be erased.

## <sup>26</sup> AT49BV320D(T)

# AT49BV320D(T)

## **39. Common Flash Interface Definition Table**

Address	AT49BV320DT	AT49BV320D	Comments
10h	0051h	0051h	"Q"
11h	0052h	0052h	"R"
12h	0059h	0059h	"Y"
13h	0003h	0003h	
14h	0000h	0000h	
15h	0041h	0041h	
16h	0000h	0000h	
17h	0000h	0000h	
18h	0000h	0000h	
19h	0000h	0000h	
1Ah	0000h	0000h	
1Bh	0027h	0027h	VCC min write/erase
1Ch	0036h	0036h	VCC max write/erase
1Dh	0090h	0090h	VPP min voltage
1Eh	00A0h	00A0h	VPP max voltage
1Fh	0004h	0004h	Typ word write – 10 μs
20h	0002h	0002h	Typ dual word program time – 5 µs
21h	0009h	0009h	Typ sector erase, 500 ms
22h	0000h	0000h	Typ chip erase, not supported
23h	0004h	0004h	Max word write/typ time
24h	0004h	0004h	Max dual word program time/typ time
25h	0004h	0004h	Max sector erase/typ sector erase
26h	0000h	0000h	Max chip erase/ typ chip erase
27h	0016h	0016h	Device size
28h	0001h	0001h	x16 device
29h	0000h	0000h	x16 device
2Ah	0002h	0002h	Maximum number of bytes in multiple byte write = 4
2Bh	0000h	0000h	Maximum number of bytes in multiple byte write = 4
2Ch	0002h	0002h	2 regions, x = 2
2Dh	003Eh	0007h	64K bytes, Y = 62 (Top); 8K bytes, Y = 7 (Bottom)
2Eh	0000h	0000h	64K bytes, Y = 62 (Top); 8K bytes, Y = 7 (Bottom)
2Fh	0000h	0020h	64K bytes, Z = 256 (Top); 8K bytes, Z = 32 (Bottom)
30h	0001h	0000h	64K bytes, Z = 256 (Top); 8K bytes, Z = 32 (Bottom)
31h	0007h	003Eh	8K bytes, Y = 7 (Top); 64K bytes, Y = 62 (Bottom)
32h	0000h	0000h	8K bytes, Y = 7 (Top); 64K bytes, Y = 62 (Bottom)
33h	0020h	0000h	8K bytes, Z = 32 (Top); 64K bytes, Z = 256 (Bottom)
34h	0000h	0001h	8K bytes, Z = 32 (Top); 64K bytes, Z = 256 (Bottom)





## 39. Common Flash Interface Definition Table (Continued)

Address	AT49BV320DT	AT49BV320D	Comments		
	VENDOR SPECIFIC EXTENDED QUERY				
41h	0050h	0050h	"P"		
42h	0052h	0052h	"R"		
43h	0049h	0049h	"I"		
44h	0031h	0031h	Major version number, ASCII		
45h	0030h	0030h	Minor version number, ASCII		
46h	0086h	0086h	<ul> <li>Bit 0 – chip erase supported, 0 – no, 1 – yes</li> <li>Bit 1 – erase suspend supported, 0 – no, 1 – yes</li> <li>Bit 2 – program suspend supported, 0 – no, 1 – yes</li> <li>Bit 3 – simultaneous operations supported, 0 – no, 1 – yes</li> <li>Bit 4 – burst mode read supported, 0 – no, 1 – yes</li> <li>Bit 5 – page mode read supported, 0 – no, 1 – yes</li> <li>Bit 6 – queued erase supported, 0 – no, 1 – yes</li> <li>Bit 7 – protection bits supported, 0 – no, 1 – yes</li> </ul>		
47h	0000h	0001h	Bit 8 – top ("0") or bottom ("1") boot sector device undefined bits are "0"		
48h	0000h	0000h	Bit $0 - 4$ word linear burst with wrap around, 0 - no, 1 - yes Bit $1 - 8$ word linear burst with wrap around, 0 - no, 1 - yes Bit $2 - continuos$ burst, $0 - no, 1 - yes$ Undefined bits are "0"		
49h	0000h	0000h	Bit $0 - 4$ word page, $0 - no$ , $1 - yes$ Bit $1 - 8$ word page, $0 - no$ , $1 - yes$ Undefined bits are "0"		
4Ah	0080h	0080h	Location of protection register lock byte, the section's first byte		
4Bh	0003h	0003h	# of bytes in the factory prog section of prot register - 2*n		
4Ch	0003h	0003h	# of bytes in the user prog section of prot register - 2*n		

# 40. Ordering Information

40.1	Green	Package	(Pb/Halide-free)
------	-------	---------	------------------

t <sub>ACC</sub>	I <sub>CC</sub> (mA)					
(ns)	Active	Standby	Ordering Code	Package	Operation Range	
70 05	0.005	AT49BV320D-70CU AT49BV320D-70TU	47C1 48T	Industrial		
70	25	0.025	AT49BV320DT-70CU AT49BV320DT-70TU	47C1 48T	(-40° to 85°C)	


Package Type		
47C1	47-ball, Plastic Chip-Size Ball Grid Array Package (CBGA)	
48T	48-lead, Plastic Thin Small Outline Package (TSOP)	





## 41. Packaging Information


### 41.1 47C1 - CBGA

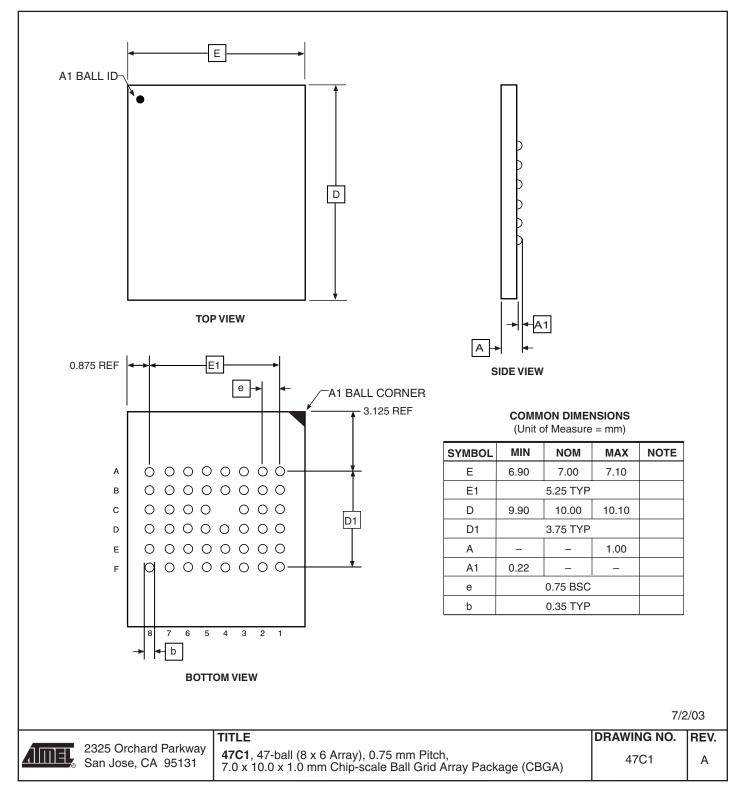

30 AT49BV320D(T)

# AT49BV320D(T)

### 41.2 48T – TSOP

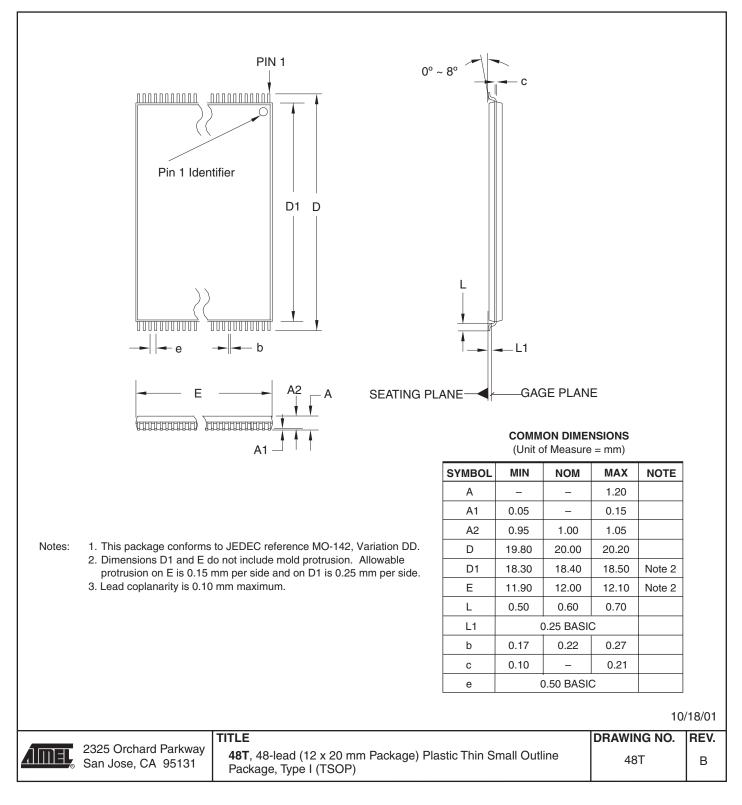





## 42. Revision History

Revision No.	History
Revision A – Sept. 2005	Initial Release
Revision B – Oct. 2005	<ul> <li>Added Top Boot version.</li> <li>Added Sector Address Table for the AT49BV320DT.</li> <li>Added CFI information for the AT49BV320DT.</li> <li>Modified Program Suspend/Resume Procedure on page 11 to match the flow chart.</li> <li>Modified Erase Suspend/Resume Procedure on page 13 to match the flow chart.</li> </ul>
Revision C – Nov. 2005	<ul> <li>Added CBGA Package Option.</li> <li>Changed the CFI values of addresses 20h &amp; 24h to 0002h and 0004h, respectively.</li> </ul>
Revision D – Feb. 2006	Changed the AT49BV320DT CFI values of addresses 23h & 25h to 0004h and 0004h, respectively.



### **Atmel Corporation**

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 487-2600

### **Regional Headquarters**

#### Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland Tel: (41) 26-426-5555 Fax: (41) 26-426-5500

#### Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong Tel: (852) 2721-9778 Fax: (852) 2722-1369

#### Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

### **Atmel Operations**

*Memory* 2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

#### Microcontrollers

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France Tel: (33) 2-40-18-18-18 Fax: (33) 2-40-18-19-60

#### ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France Tel: (33) 4-42-53-60-00 Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland Tel: (44) 1355-803-000 Fax: (44) 1355-242-743

#### **RF**/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany Tel: (49) 71-31-67-0 Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

### Biometrics/Imaging/Hi-Rel MPU/

High Speed Converters/RF Datacom Avenue de Rochepleine BP 123 38521 Saint-Egreve Cedex, France Tel: (33) 4-76-58-30-00 Fax: (33) 4-76-58-34-80

*Literature Requests* www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDI-TIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNTIVE, SPECIAL OR INCIDEN-TAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, or warranted for use as components in applications intended to support or sustain life

© Atmel Corporation 2006. All rights reserved. Atmel<sup>®</sup>, logo and combinations thereof, Everywhere You Are<sup>®</sup> and others, are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

